

# sørenmobler

## BED ASSEMBLY INSTRUCTIONS

### COMPONENTS REQUIRED:

- 1 x Headboard
- 1 x Tail Board
- 2 x Side Rails
- 1 x set of slats (15)
- 1 x centre rail
- 10 x 8x 1¼ screws

We recommend two people for this assembly.


1. Unwrap all pieces of the bed from blankets/ wrapping used to transport them
2. Place the Headboard in desired position in the bedroom
3. Hold the Side rail and slide the bracket into the bracket on the headboard- repeat for both sides of the bed. The Cleat on the inside of the side rail will be closest to the top



Bracket on Headboard and Tail Board



Bracket on Side Rails

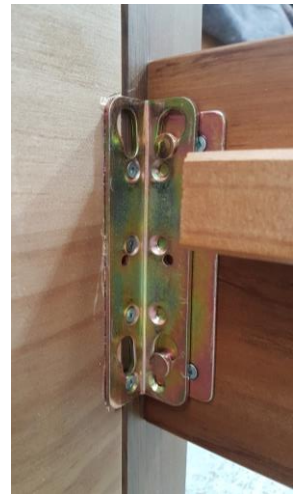

Example of Side Rail bracket attached to Headboard bracket

4. Repeat the above action to attach the Tail Board to the side rails
5. Place the centre rail into the Bedframe



Centre Rail Bracket



Centre Rail in place



6. Tap all rails down firmly to ensure the brackets have slotted together
7. Place the slat bundle over the Bedframe and unwrap- slide the slats along the bed until they are evenly spaced from 1 end to the other. For added stability you can screw the end slats to the Bedframe (this is not mandatory)
8. Place the mattress on top and the bed is ready to use.



For added stability you can screw end slat into frame



Sorensen Furniture Company  
26 London Street, PO Box 5005,  
Wanganui 4542, New Zealand  
Tel. (06) 349 0460 Fax. (06) 343 7415

[sales@sorenmobler.co.nz](mailto:sales@sorenmobler.co.nz)  
[www.sorenmobler.co.nz](http://www.sorenmobler.co.nz)